

BOYD

FINISH CARE

Please adhere to the proper care instructions for your Boyd product(s). Note that different finishes are maintained in different ways. Improper cleaning may result in product damage and cancellation of warranty.

METAL FINISHES	
CHROME	Clean with a non-abrasive chrome cleaner or a good dish soap and a soft clean cloth. For additional cleaning, add vinegar to a soft rag, continuously using a clean part of the rag to buff. The fixture may be additionally protected by adding a light coat of non-abrasive paste wax.
ALUMINUM BRASS COPPER GOSSAMER GOLD LIGHT ANTIQUE NICKEL	To clean, use a dry microfiber cloth dampened with water. Add a drop of mild dishwashing detergent to the cloth and then gently rub the fixture. Rinse the surface with water and dry with a clean, dry microfiber cloth. Do not use any cleaners or abrasive substances.
MISCELLANEOUS FINISHES	
WOOD	Wipe with a clean, damp sponge using clear water. DO NOT use any cleaning agents. Dry with a soft cloth. Dust regularly with a soft, clean cloth or feather duster. To enhance the wood finish, a light application of fine furniture wax may be used.
POWDER COAT	Cleaning should occur every three months. In areas where pollutants are more prevalent, like in coastal, industrial or geothermal areas, cleaning should occur every one to two months. Carefully remove any loose surface deposits with a wet sponge. Use a soft brush (non-abrasive) and a diluted solution of a mild detergent in warm water to remove dust, salt and other deposits. Rinse the surface thoroughly with clean, fresh water after cleaning to remove all residues.
SHADES	Dust lightly with a feather duster or microfiber cloth, gentle vacuum or sticky lint roller.
ACRYLIC	Clean with a soft microfiber cloth and soapy water. After wetting the cloth, lightly blot the surface rather than applying pressure as you wipe. After the entire surface has been dampened, use the dry side of the cloth to dry/buff the material.
GLASS	Clear glass may be cleaned with a glass cleaner applied with a clean, soft cloth. Etched glass may be cleaned with rubbing alcohol applied with a clean, soft cloth.
SILK CORD & TASSEL	Lightly vacuum behind a fine plastic grid or clean with "Energine Spot Remover."
LEATHER	Dust with a clean, soft cloth or feather duster and spot clean with a professional leather cleaner as necessary.
SWAROVSKI CRYSTALS	Wearing cotton gloves, hold the crystal in one hand and a lint-free cloth in the other. Use a small circular motion to polish each crystal.