

- 1. ATTACH MOUNTING BRACKET TO OUTLET BOX AS SHOWN. SEE NEXT PAGE FOR AN ALTERNATE METHOD.
- 2. MAKE WIRE CONNECTIONS USING TWIST-ON CONNECTORS: CONNECT BLACK FIXTURE WIRE TO BLACK SUPPLY WIRE; WHITE FIXTURE WIRE TO WHITE SUPPLY WIRE; FIXTURE GROUND WIRE TO BOX GROUND WIRE OR TERMINAL. PUSH ALL CONNECTIONS INSIDE OUTLET BOX.
- 3. PLACE BACKPLATE OF FIXTURE OVER MOUNTING BRACKET. WITH BACKPLATE FLUSH TO WALL, SECURE BY TIGHTENING SET SCREWS AT TOP AND BOTTOM OF BACKPLATE WITH HEX WRENCH PROVIDED.

  NOTE: FIXTURE CAN BE MOUTNED VERTICALLY WITH THE SHADE FACING UP OR DOWN.
- 4. INSERT "CEILING FAN" LAMP(S) INTO LAMPHOLDER. DO NOT EXCEED MAXIMUM RATED WATTAGE ON LABEL.
- 5. ALIGN SHADE OVER HARP AND SECURE INTO PLACE WITH THE THREADED CUBE FINIAL.

	BOYD LIGHTING COMPANY	9 4 4	FOLSOM STREET	SAN FRANCIS	CO CALIFORNIA 94107
		TEL	415.778.4300 FAX	415.778.4319	W W W . B O Y D L I G H T I N G . C O M