

C-10687

Totem Triple Sconce

NOTE: THIS FIXTURE IS INTENDED TO BE MOUNTED ONTO A 3½" OCTAGONAL OUTLET BOX. THIS SIZE IS SPECIFIED SO THAT THE DRIVER ENCLOSURE AS SHOWN ON PAGE 2 WILL FIT INTO IT. IF ANOTHER STYLE OF OUTLET BOX IS USED, DRIVER WILL HAVE TO BE REMOTELY INSTALLED.

3. With included twist-on wire connectors, connect black fixture wire to hot supply wire (typically black); connect white fixture wire to neutral supply wire (typically white); connect the copper fixture wire to the ground wire or ground terminal at the outlet box. Neatly push connections into outlet box.

4. Secure mounting bracket to outlet box with the mounting screws that were provided. Due to the weight of the fixture, secure the bottom portion of the mounting bracket with the included wall anchor and anchor screw.

5. Hold sconce near mounting bracket and push the 3-wire connector pieces together.

 
 
**IMPORTANT | CAUTION:**

**READ ALL INSTRUCTIONS BEFORE THOROUGHLY BEFORE PROCEEDING. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**

## INSTALLATION: TOTEM TRIPLE SCONCE

1. Carefully remove fixture from packaging. To avoid damage, do not use a knife or other sharp instruments.

2. Remove white mounting bracket from fixture by loosening hidden set screw on bottom end of backplate (see Page 2 for detail). Use the included Allen wrench for removal.

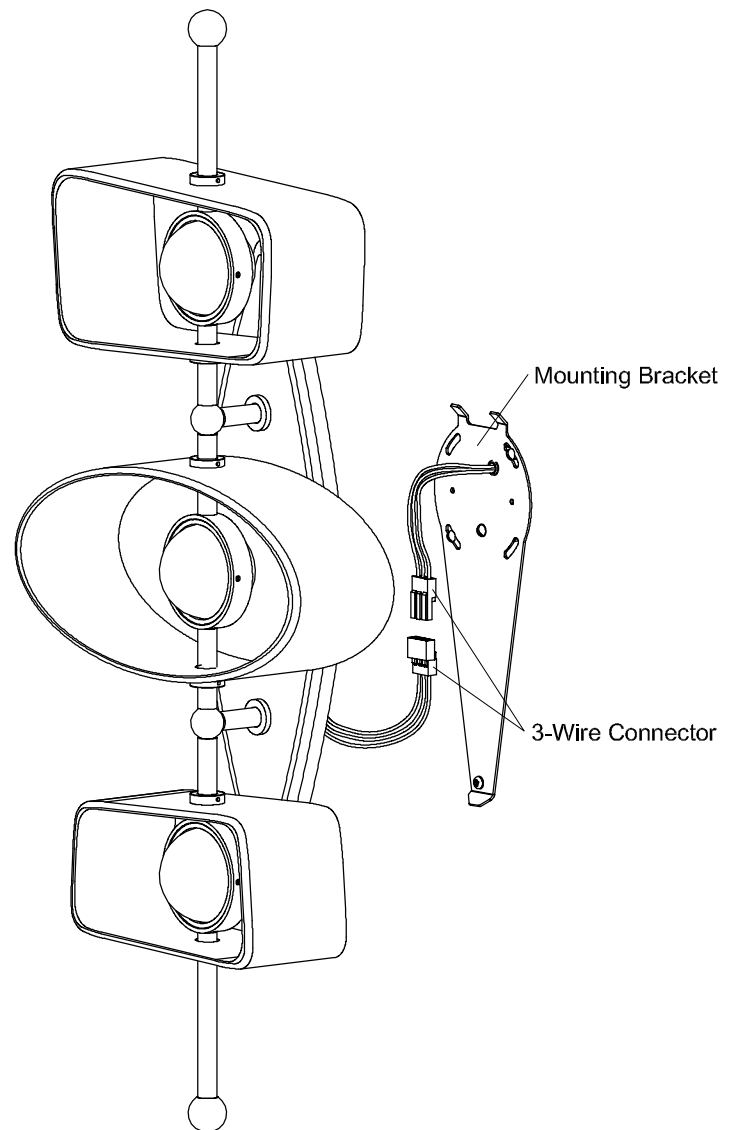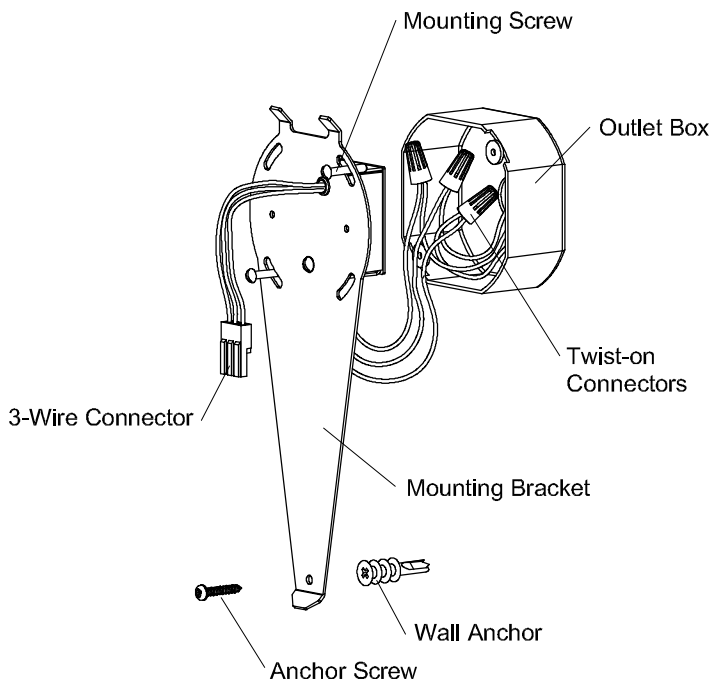

6. Attach fixture by lowering catch tab on reverse side of backplate onto top flange of mounting bracket. Push bottom of fixture toward wall. Fixture should sit flush on wall. Tighten set screw on bottom of backplate using an Allen wrench.

If fixture does not sit flush on wall, the wire connection may be interfering with the fit. Remove fixture and look at connection from Step #5.

7. Restore power at the circuit breaker.

