



BOYD

02.17.06

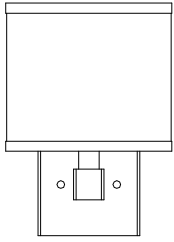

C-10112

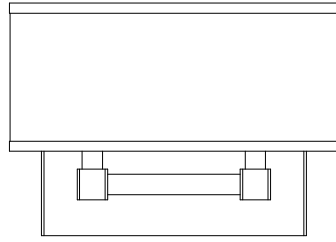

C-10113

INSTRUCTIONS FOR INSTALLATION LIBRARY WALL SCONCE SERIES C-10012, C-10113

**IMPORTANT: READ ALL INSTRUCTIONS
THOROUGHLY BEFORE PROCEEDING.**

**CAUTION: TURN OFF POWER AT CIRCUIT
BREAKER OR FUSE BOX BEFORE PROCEEDING.**

STEP 1.

Carefully remove fixture from packaging. Avoid using sharp blade on packaging as it may damage the finish or the fixture.

STEP 2.

Attach the mounting bracket to the outlet box with provided hardware. (See Figure 1)

Note: universal mounting bracket is not required for all styles of outlet boxes and plaster rings.

STEP 3.

Using wire connectors provided, make wire connections: Connect the black fixture wire to the black supply wire. Connect the white fixture wire to the white supply wire. Connect the fixture ground wire to supply ground or screw. Push connections inside outlet box. (See Figure 1)

Figure 1


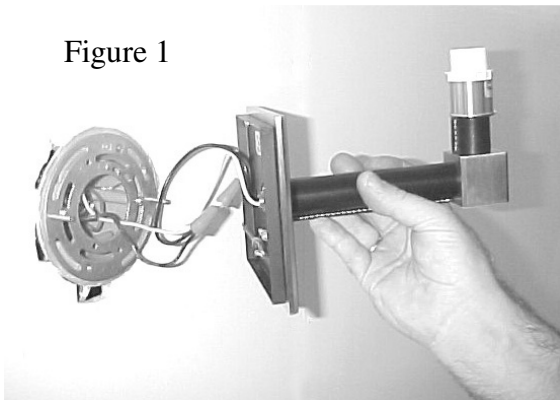


Figure 2

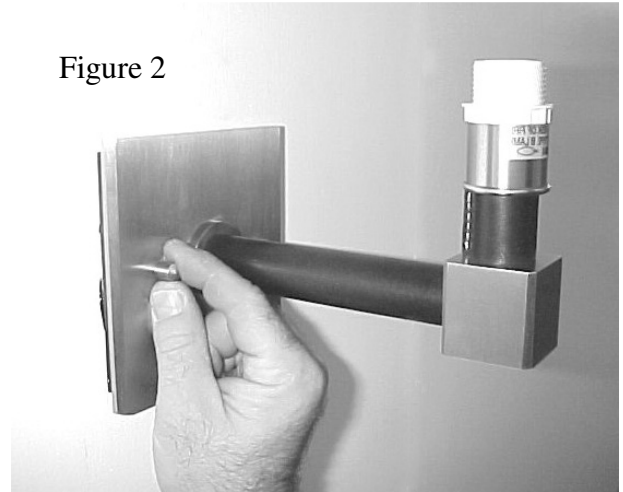

STEP 6.

Install the shade over the threaded lamp holder and secure in place with the shade ring. (See Figure 3)

STEP 7.

Install type "B" lamps rated at 60 watts maximum.

Figure 3

