



10118 Crisscross Pendant

**Lamping Specifications**

**Incandescent:**

- One, A-19, 75w max each

**Fluorescent:**

- 120v-277v
- One, 22w and One, 40w
- T-5 Circular, 2GX13 base

**IMPORTANT | CAUTION**

Read all instructions thoroughly, and turn off power at circuit breaker or fuse box before proceeding.

**IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES.**

**Step 1** Carefully remove fixture from packaging. Avoid using sharp blade on packaging as it may damage the finish or the shade.

**Step 2** Locate the canopy and stem assembly. Remove the decorative stem cover and threaded steel tubing from the canopy assembly. (See Figure 1)

**Step 3** Route the wires from the lamp fixture up and through the steel tubing. Thread the steel tubing onto the lamp fixture and tighten into the coupling, carefully slide the decorative tubing over the steel tubing. (See Figure 2)

**Step 4** Place the decorative centering check over the steel tubing and use to center up the decorative tubing. (See Figure 3)

**Step 5** Route the wires through the canopy and swivel assembly and thread the swivel and canopy assembly to the fixture stem. Adjust the height of the mounting strap inside the canopy as necessary, tighten the steel nut firmly against the mounting strap.

With the stem and canopy assembly securely fastened, loosen and lower the retainer ring from the swivel of the canopy and carefully lower the canopy to expose the mounting hardware. (See canopy detail)

**Step 6** Install the one inch stud hardware (provided in the mounting kit) into the outlet box, and secure with the two hex nuts. Lift fixture up to the outlet box and align slots in mounting strap with studs in outlet box, thread the two battery nuts onto the studs to suspend the pendant from the outlet box. Make sure that all hardware is securely fastened. (See Figure 4)

**Step 7** With the power off at breaker, make wire connections using twist-on connectors: connect the black fixture wire to the hot supply wire (typically black); connect the white fixture wire to the neutral supply wire (typically white); connect the copper fixture wire to the ground wire or ground terminal at the outlet box. Push wires into outlet box.

**Step 8** Carefully set the canopy flush with ceiling. Secure the canopy in place with the decorative threaded ring. (See Figure 5)

**Step 9** Remove the protective covering from the shade and install lamps per recommended label lamping.

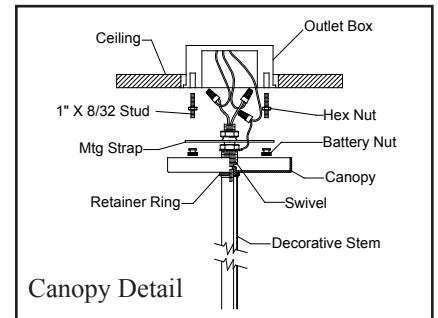


Figure 1

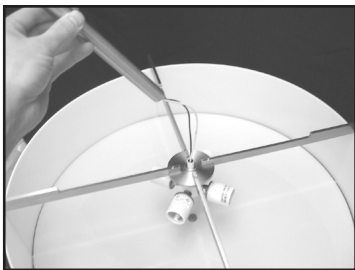


Figure 2



Figure 3



Figure 4



Figure 5