

Lamping Specifications

Incandescent: Candelabra base,
Two, A-15, 60w max each
(Ceiling fan lamp)

Step 1 Remove fixture and fixture components from packaging. Avoid using a sharp blade on packaging as doing so may result in damage to the finish on fixture and/or linen shade.

Step 2 After turning off power at the circuit breaker/fuse box, attach the mounting bracket to the outlet box using screws provided in the mounting kit. (See Figure 1)

Step 3 Using twist-on connectors provided in the mounting kit, make wire connections: Connect the black fixture wire to the hot supply wire; typically black. Connect the white fixture wire to the neutral supply wire; typically white. Connect the fixture ground wire to the supply ground wire; typically copper or green.

Step 4 Carefully push all wire connections inside the outlet box, and secure the fixture to the mounting bracket by holding fixture flush to the wall, and tightening the four set screws with a 1/8" allen wrench. (See Figure 2)

Step 5 Install the bottom acrylic diffuser, frosted side down, and secure with bottom finials. (See Figure 3)

Step 6 Install shade harps. (See Figure 4)

Step 7 Install appropriate lamping. Do not exceed recommended wattage per relamp label. Place linen shade onto harps and secure with top finials.

Step 8 Restore power at the circuit breaker/fuse box.

IMPORTANT | CAUTION

Read all instructions thoroughly, and turn off power at circuit breaker or fuse box before proceeding.

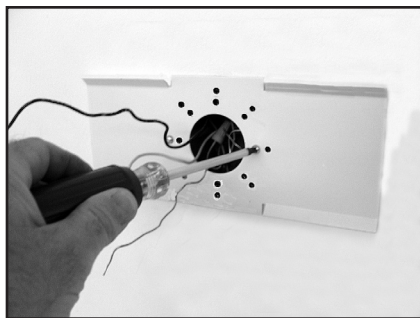


Figure 1

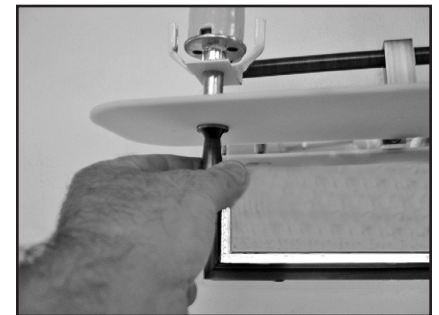


Figure 3

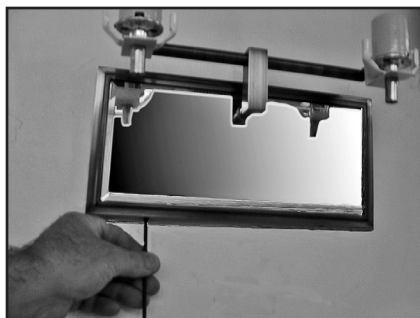


Figure 2

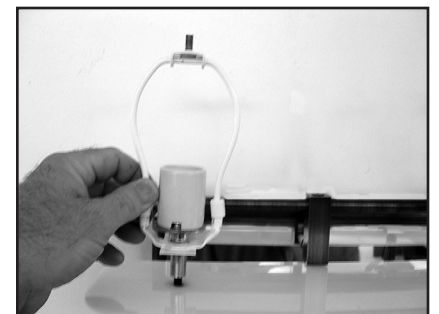


Figure 4

Thank you for your purchase and enjoy your Boyd lighting fixture.