

Instructions for Installation:

C-10178 Parisian Pendant

Lamping specifications

Incandescent:

Six, A-19, 60w max ea

Fluorescent:

Non-Dimming
120v-277v, Six, CFTR26W/GX24Q
*Dimming
120v-277v, Six, CFQ26W/G24q-3

IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES

**IMPORTANT | CAUTION
READ ALL INSTRUCTIONS THOROUGHLY.
TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**

Step 1 Carefully remove fixture from packaging. Avoid using sharp blade on packaging as it may damage the finish on the fixture.

Step 2 Locate the canopy and stem assembly and remove the hardware from the bottom end of the stem. This hardware is for shipping purposes and can be discarded. Remove the decorative stem cover and threaded pipe from the canopy assembly.

Step 3 Route the wires from the lamp fixture up and through the threaded pipe. Thread the steel pipe onto the lamp fixture and tighten into the coupling.

Step 4 Carefully slide the decorative stem tubing over the steel threaded pipe. Place the decorative centering check over the pipe and use to center up the decorative stem.

Step 5 Route the wires through the canopy and swivel assembly and thread the swivel and canopy assembly to the fixture deco stem and threaded pipe. The threaded pipe should protrude through the decorative check a minimum of 1/4 inch so that the swivel can be assembled. Adjust as necessary.

Step 6 Install top diffuser on lighting fixture and rest on tabs.

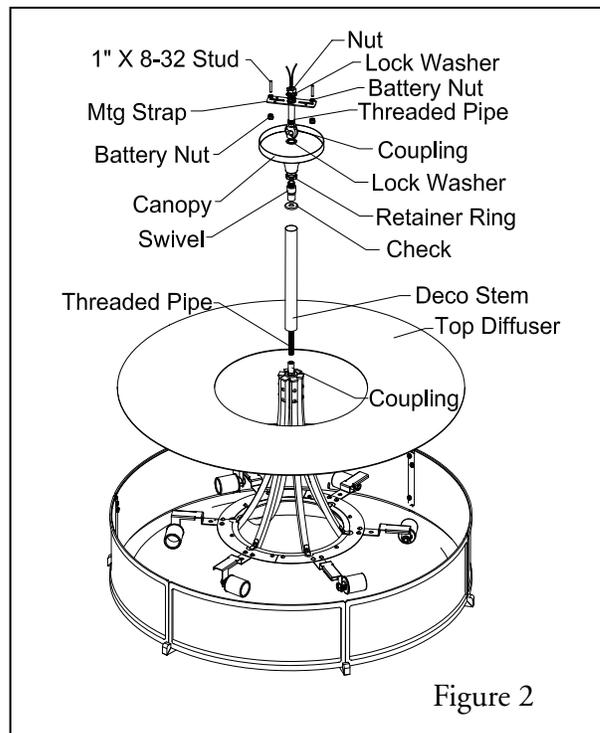


Figure 2

Step 7 With the stem and canopy assembly securely fastened, remove the deco retainer ring from the swivel of the canopy and carefully lower the canopy down to expose the mounting hardware. Install the 1" studs, (provided in the mounting kit) into the outlet box, and lock into place with the steel hex nuts. Lift fixture up to the outlet box until the studs protrude through the mounting strap and thread the thumb screws onto the studs to suspend the pendant from the outlet box. Make sure that all hardware is securely fastened.

Step 8 With the power off at breaker, make wire connections using twist-on connectors: connect the black fixture wire to the hot supply wire (typically black); connect the white fixture wire to the neutral supply wire (typically white); connect the copper fixture wire to the ground wire or ground terminal at the outlet box.

Step 9 Carefully slide the canopy up stem and set flush with ceiling. Secure the canopy in place with the decorative threaded ring.

Step 10 Lift up the perforated diffuser and install lamps per recommended label lamping.

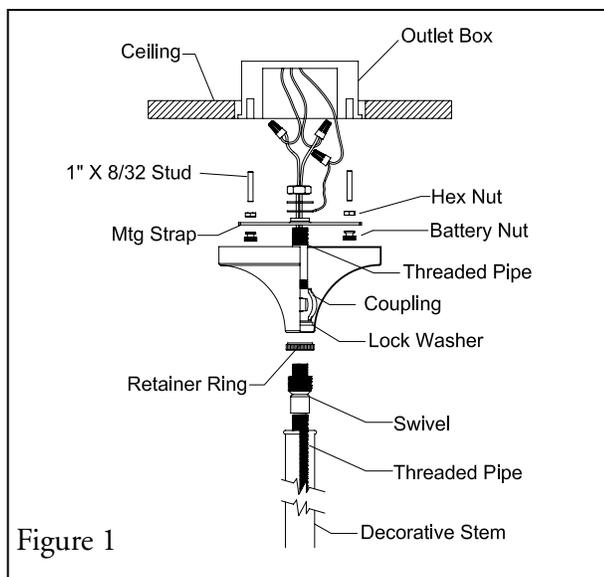


Figure 1