



Lamping Specifications Incandescent Candelabra base

One, B-10, 60w max

IMPORTANT | CAUTION

Read all instructions thoroughly, and turn off power at circuit breaker or fuse box before proceeding.

Step 1 Remove fixture and all fixture components from packaging. Avoid using a sharp blade on packaging because doing so may result in damage to the finish on the fixture.

Step 2 Using the allen wrench provided in mounting kit, remove the white mounting bracket from the back of the fixture. Install the mounting kit to the outlet box using the round head screws. (See Figure 1)

IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES.

Step 3 Make wire connections. Using the twist-on connectors, make wire connections. Connect the white wire to the neutral supply wire; typically white. Connect the black fixture wire to the hot supply wire; typically white. Connect the fixture ground wire to the ground supply wire or the ground screw in the outlet box.

Step 4 Place the fixture directly over the mounting bracket, then tighten the backplate screws with the allen wrench until the backplate pulls tightly against the wall. (See Figure 2)

Step 5 After removing the top shade ring from the lampholder, place the shade onto the lampholder, then replace the shade ring. Tighten the shade ring securely with fingers. (See Figures 3 & 4)

Step 6 Install lamps per label recommendations, then restore power at the breaker/fuse box.



Figure 1



Figure 3

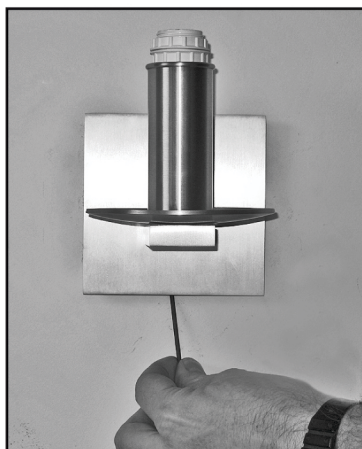


Figure 2



Figure 4

Thank you for your purchase and enjoy your Boyd lighting fixture.