

**Instructions for Installation:**  
C-10382 Bento Scence

**Lamping Specifications:**

Fluorescent Non-Dimming:

- 120v- One, CFS 2-D 10W Max
- 277v- One, CFS 2-D 10W Max

**IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES**

**IMPORTANT | CAUTION  
READ ALL INSTRUCTIONS THOROUGHLY.  
TURN OFF POWER AT CIRCUIT BREAKER OR  
FUSE BOX BEFORE PROCEEDING.**

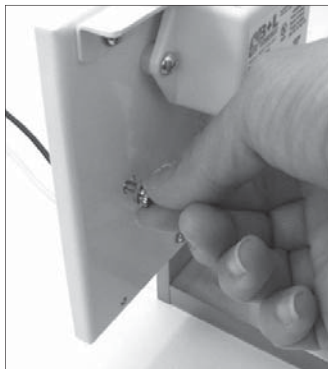


Figure 1

Step 1 Remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the finish of the fixture.

Step 2 Turn off power to J-box.

Step 3 Remove universal mounting plate from back of fixture. (Figure 1) Install mounting plate to J-box using mounting screws provided, routing wires through center hole of mounting bracket.

Step 4 Using supplied luminaire disconnect for wire connections, attach the white fixture wire to the neutral supply wire (typically white), and the black fixture wire to the hot supply wire (typically black). Black wire is connected to the section of the luminaire disconnect marked with a "B" and a black solid line. Connect the fixture ground wire to the ground supply wire or the ground screw in the outlet box. (Figure 2)

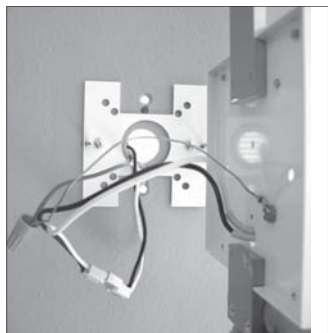


Figure 2

Step 4 Push all connections inside of junction box and slide fixture onto universal mounting plate. Secure fixture with thumb screws. (Figure 3)

Step 5 Place alabaster diffuser in bottom of fixture and attach using provided screw. Ensure plastic washer is between screw and alabaster diffuser to prevent cracking or marring. (Figure 4) (\*Do not overtighten screws or the diffuser may crack or become damaged.)



Figure 3

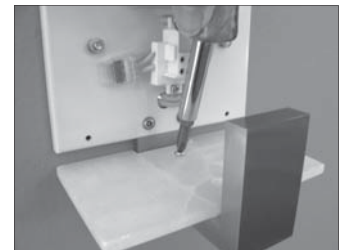


Figure 4

...Continued on Page 2

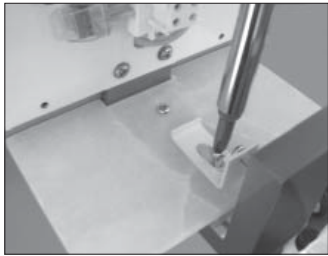


Figure 5

Step 6 Attach shade clip to alabaster diffuser, using provided screw - do not tighten at this time. (Figure 5)

Step 7 Install lamp into fixture.

Step 8 Position shade on fixture (ensuring blind hole is toward bottom of fixture), slide bracket forward until screw is inserted in blind hole of shade and tighten attachment screw (do not over-tighten, or shade could mar or crack). (Figure 6-7)

Step 8 Install top diffuser using supplied button-head screws. (Figure 8)

Step 9 Restore power to the circuit and illuminate lamp.



Figure 7

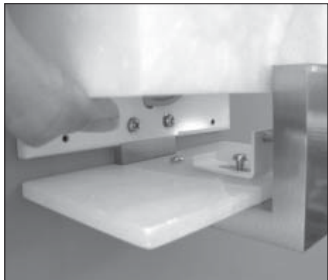


Figure 6

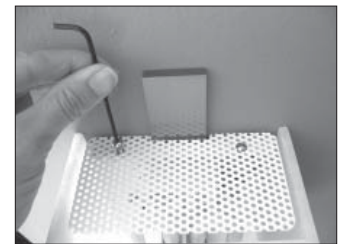


Figure 8

Thank you for your purchase and enjoy your Boyd product.