

Catalog #

9841 9842 9843



## INSTRUCTIONS FOR INSTALLATION:

**IMPORTANT**: READ ALL

INSTRUCTIONS THOROUGHLY BEFORE PROCEEDING.

**CAUTION:** TURN OFF POWER AT

CIRCUIT BREAKER OR FUSE BOX BEFORE

PROCEEDING.

**INSTALLATION:** Orion Pendant

## **OUTLET BOX MOUNTING**

1. Unscrew canopy ring and lower canopy on stem being careful not to scratch finish. (See figure 1)

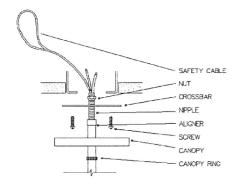


Figure 1.

2. Secure the safety cable loop snugly (no more than 3" of slack) to a structural part of the building.

944 Folsom Street San Francisco, CA 94107-1007

- 3. Fasten crossbar to outlet box with screws provided.
- 4. Using wire connectors provided, make wire connections: The down spotlight and the main up lights can be wired as separate circuits if there are two circuits into the outlet box. For each circuit connect the black fixture wire to black supply wire and the white fixture wire to white supply wire. Connect the fixture ground wire to supply ground or screw. Push connections inside outlet box.
- 5. Secure canopy to the ceiling by threading canopy ring onto aligner.
- 6. Slide the glass bowl and lower ring assembly onto stem assembly support rods as shown. (See figure 2) Support rods should protrude through the holes in the lower ring assembly.

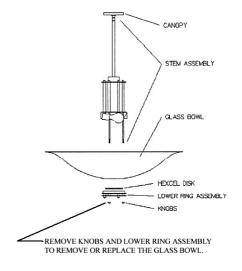


Figure 2.

Telephone: 415.778.4300 FAX 415.778.4319

BOYD LIGHTING COMPANY 7. Secure with knobs provided. (See figure 3)

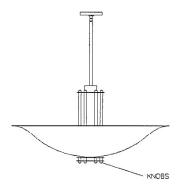


Figure 3.

- 8. Place the hexcel disk inside the bowl over the opening in the lower ring assembly.
- 9. For relamping of the MR-16 Downlight, remove the hexcel disk from the inside of the bowl and remove lamp.

10. Push new lamp into position through the hole in the bottom of the fixture. Contacts on lamp must line up with holes in lampholder. Reposition hexcel disk over opening. (See figure 4)

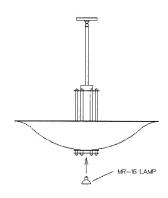


Figure 4.