BOYD

9893 02.10.06



Note: Shade shown for illustration purposes only. Never install fixture with shade already attached to avoid damage.


## INSTRUCTIONS FOR INSTALLATION

IMPORTANT: READ ALL INSTRUCTIONS THOROUGHLY BEFORE PROCEEDING.

CAUTION: TURN OFF POWER AT CIRCUIT

BREAKER OR FUSE BOX BEFORE



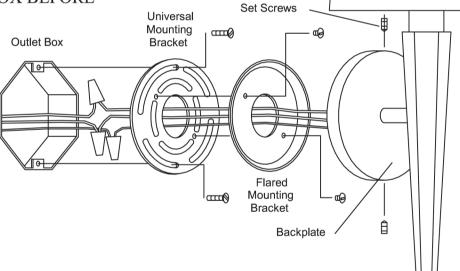


## **INSTALLATION:**

- 1. Attach flared mounting bracket to outlet box as shown. Note: Universal mounting bracket is not required for some styles of outlet boxes and plaster rings.
- 2. Make connections using twist on connectors: connect black fixture wire to black supply wire; white fixture wire to white supply wire; fixture ground wire to box ground wire or terminal. Push all connections inside outlet box.
- 3. Position backplate of fixture over flared mounting bracket so that it is flush against wall. Secure by tightening top, then bottom set screws with hex key provided. Do not overtighten.
- 4. Install shade as illustrated on Page 2.

Tel: 415.778.4300 Fax: 415.778.4319 Shade Installation for 9893, 9897 (Fig 1)

- 1. Clip-On Shade: Insert lamp. Clip shade onto lamp. (not shown)
- 2. Mounted Shade: Place shade over lampholder.
- 3. Secure shade with shade ring.
- 4. Screw candelabra lamp into lampholder.

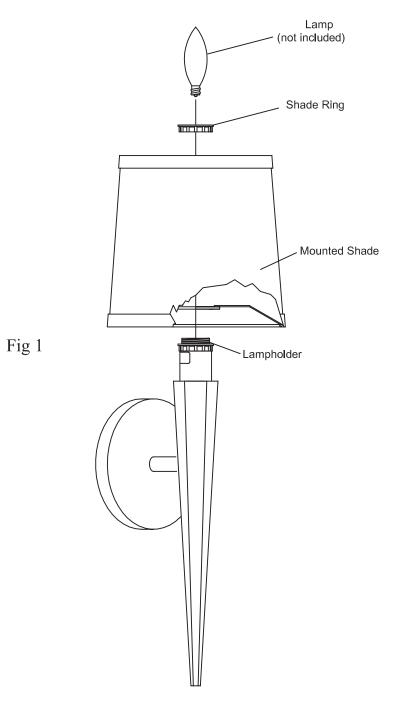

944 Folsom Street San Francisco, CA 94107-1007