



BOYD

IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES

**IMPORTANT | CAUTION !!
READ ALL INSTRUCTIONS THOROUGHLY.
TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**



Comet Single Sconce

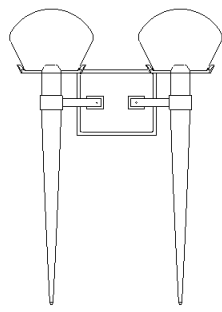

Comet Double Sconce

Instructions for Installation:

C-10590 Comet Single Sconce
C-10591 Comet Double Sconce

Lamping Specifications:

Incandescent: One B-10
Candelabra Base, 40w Max
each, LED Screw-in Lamp

Step 1: Remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish.

Step 2: Turn off power to circuit at fuse box/circuit breaker.

Step 3: Attach the power wires from the Fixture to the wires of the J-Box using the supplied Wire Nuts. Connect the white fixture wire to the neutral supply wire (typically white); connect the black fixture wire to the hot supply wire (typically black); connect the green (or copper) fixture wire to the ground wire and/or the ground terminal in the outlet box. Push all connections inside of junction box. Install the Mounting Bracket to the junction box with the 2 supplied 8-32 Screws.

Step 4: Install the Fixture to the Mounting Bracket with the 4 Set Screws (2 at the top and 2 at the bottom of the Back Plate), using the supplied Allen Wrench. **Check for sure mounting before going to the next step.**

Step 5: Install the Candelabra Lamp(s). Install Decorative Ring. This part sits on the loosely on the Cradle.

Step 6: Carefully place the Glass Shade onto the Cradle(s) and hold onto to it while securing it with the 2 Set Screws (2 per Glass Shade) using the supplied Allen Wrench. Do not over tighten as this may crack the Glass Shade. **Check for secure installation before releasing the Glass Shade or breakage may occur!!**

Step 6: Restore power to circuit.

