

# BOYD



## Instructions for Installation:

C-10666 Opera House Small  
C-10667 Opera House Large

## Lamping Specifications:

Incandescent: One Medium Base, T10, 60w Max, LED Screw-in Lamp

**IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES**

**IMPORTANT | CAUTION !!  
READ ALL INSTRUCTIONS THOROUGHLY.  
TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**

Step 1: Remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish.

Step 2: Turn off power to circuit at fuse box/circuit breaker.


Step 3: Install the Crossbar to the junction box with the 2 supplied 8-32 Screws. Attach the power wires from the Base to the wires of the J-Box using the supplied Wire Nuts. Connect the white fixture wire to the neutral supply wire (typically white); connect the black fixture wire to the hot supply wire (typically black); connect the green (or copper) fixture wire to the ground wire and/or the ground terminal in the outlet box. Push all connections inside of junction box.

Step 4: Install the Base to the Crossbar with the supplied Thumb Knobs.

Step 5: Install the T10 Lamp.

Step 6: Carefully place the Glass Shade fully into the Base and hold onto to it while securing it with the 3 supplied Retainer Screws. Do not over tighten as this may crack the Glass Shade. **Check for secure installation before releasing the Glass Shade or breakage may occur!!**

Step 6: Restore power to circuit.

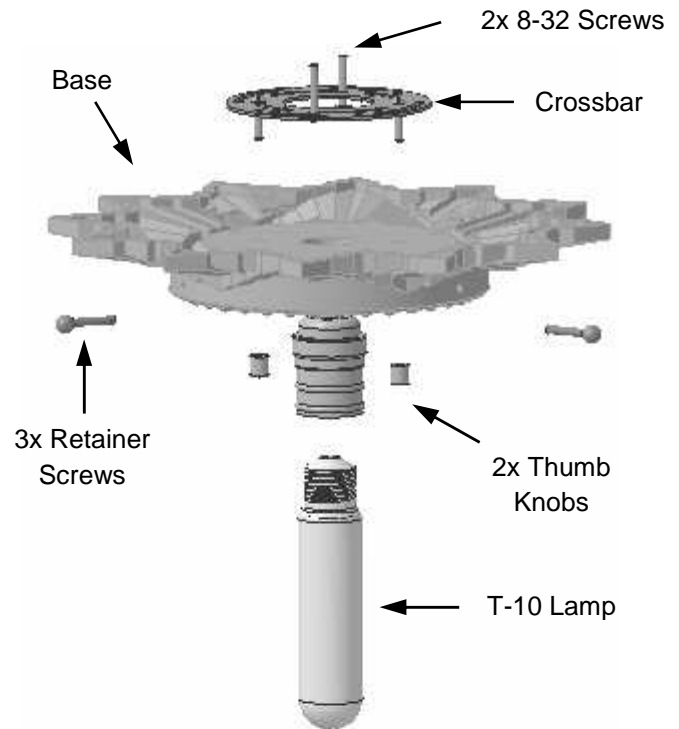

Glass Shade →

