



Lamping Specifications

- E10302 Belvedere I Sconce
Incandescent Medium Base One, A-19, 60w max
Fluorescent One, CFTR26W/GX24q
- E10303 Belvedere II Sconce
Incandescent Medium Base One, A-21, 100w max
Fluorescent One, CFTR26W/GX24q or
Fluorescent One, CFTR32W/GX24q or
Fluorescent One, CFTR42W/GX24q

Installation Instructions

E10302 Belvedere I Sconce
E10303 Belvedere II Sconce

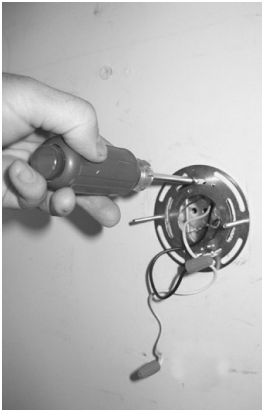


Figure 1

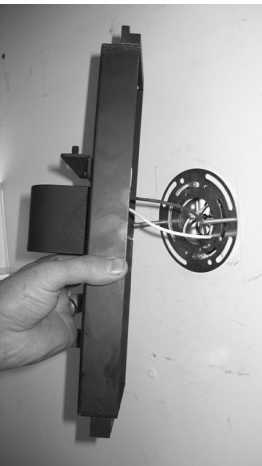


Figure 2



Figure 3

Step 1 Carefully remove fixture from packaging. Avoid using sharp blade on packaging as it may damage the finish or the glass diffusers. Loosen the lower retainer screws on the fixture housing and lift the housing away from the electrical backplate and remove the universal mounting strap and hardware.

Step 2 Turn power off at the circuit. Locate outlet box and mount the universal mounting bracket to the outlet box. Make sure that the outlet box is mounted to a structural member such as a wall stud or similar support with adequate hardware so as to support fixture weight or a minimum of 20 lbs. Mount so that the threaded hardware is oriented in a horizontal position. (See Figure 1)

Step 3 Make wire connections using twist-on connectors: connect the black fixture wire to the hot supply wire (typically black); connect the white fixture wire to the neutral supply wire (typically white); connect the copper fixture wire to the ground wire or ground terminal at the outlet box, push field wiring connections into the junction box. (See Figure 2)

Step 4 Secure electrical backplate assembly to universal strap with thumb knobs. Apply weather proof caulking or silicon type adhesive to the external edge of the black backplate to prevent moisture from entering between fixture backplate and the wall. Leave a small gap (approx 1/2") at bottom of the backplate so that moisture can escape. (See Figure 2 and Figure 3)

Step 5 Install glass diffusers into the shade housing. Install glass with the ribbed side facing out. Insert the glass diffuser into position and lower into the retainer bracket. Position the decorative housing over the electrical backplate and align the two studs on the backplate with the two holes in the housing hood. Carefully lower the housing down and into position. Note the pictured housing has the glass diffusers removed for clarity. (See Figure 4)

Step 6 Secure the housing into position and onto the backplate with the two set screws at the bottom of the housing. (See Figure 5)

Step 7 Install lamps per label recommendations.

Step 8 Install the lower diffuser through the opening in the bottom of the housing and orient into position. (See Figure 6)

Step 9 Restore power to circuit and confirm proper installation.

IMPORTANT | CAUTION

Read all instructions thoroughly, and turn off power at circuit breaker before proceeding.

IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES.



Figure 4



Figure 5



Figure 6