

**Instructions for Installation:**  
E-10409 Regent Lantern

**Lamping Specifications:**  
Halogen, Bi-pin base  
One, MRC-16, 50w Max  
12v Integral transformer

LED: 10W Module

**IMPORTANT! AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRIC CODES (NEC) OR APPLICABLE LOCAL CODES**

**IMPORTANT | CAUTION  
READ ALL INSTRUCTIONS THOROUGHLY.  
TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.**

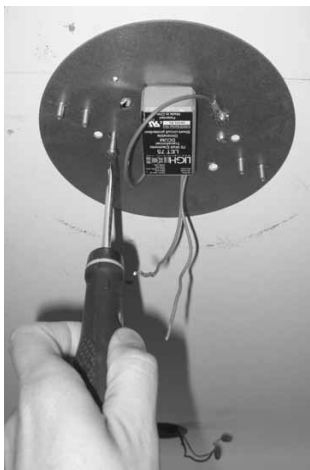


Figure 1

Step 1 Remove fixture from packaging. Avoid using a sharp blade on the packaging as doing so may result in damage to the fixture or finish.

Step 2 Turn off power to circuit at fuse box/circuit breaker.

Step 3 Route supply wires from Junction box through hole in ceiling plate and mount ceiling plate to J-box using provided 8-32 screws. (Figure 1)

Step 4 Locate the fixture and stem canopy assembly and loosen the retainer ring and carefully lower the canopy down the stem to reveal the mounting bracket and wire. Carefully lift the lighting fixture and stem assembly up to the ceiling plate. Attach mounting bracket on the fixture stem to the ceiling plate using provided thumb nuts. (Figure 2)



Figure 4

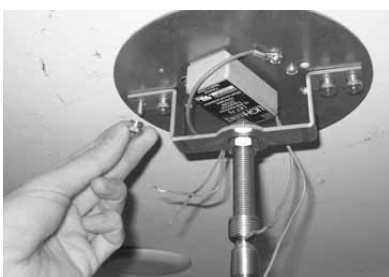


Figure 2

Step 5 Make wire connections connect transformer or driver wires to the power supply wires from junction box. Connect the white fixture wire to the neutral supply wire; typically white, connect the black fixture wire to the hot supply wire; typically black, connect the copper fixture wire to the ground wire and/or the ground terminal in the outlet box. (Figure 3)

Step 6 Carefully lift the canopy up the stem and secure canopy to ceiling using the canopy aligner nut. (Figure 4)

Step 7 If applicable thread the decorative crystal finial to the candle stem on fixture.

Step 8 Install proper lamping as per relamp label (for non-LED fixtures)

Step 9 Restore power to circuit and or breaker.

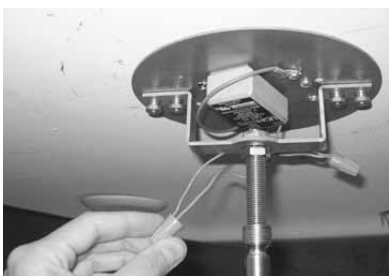


Figure 3



Figure 5