



INSTALLATION INSTRUCTIONS

- C-10710 Plateau Sconce Round 6"
- C-10714 Plateau Sconce Square 6"

IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

This fixture requires remote installation of the LED driver within the wall. If this requirement cannot be satisfied, STOP INSTALLATION NOW!

STEP 1

- Carefully remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Glass shade is fragile so handle with care.

STEP 2

- Turn off power at fuse box or circuit breaker.

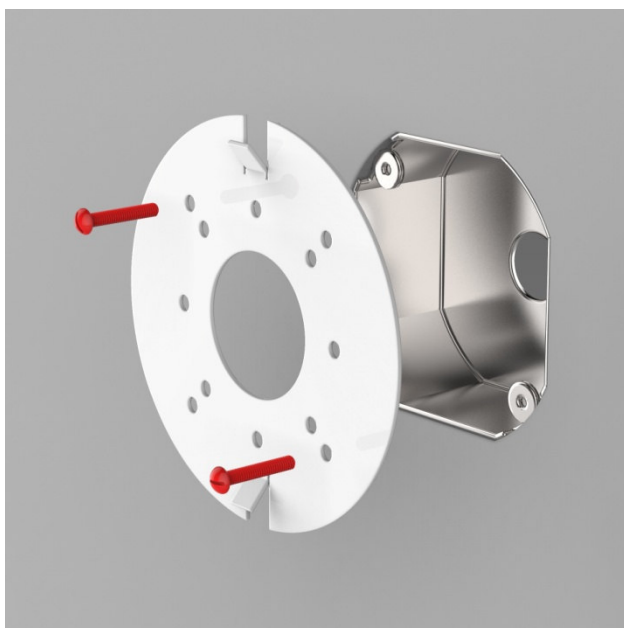


Figure 1

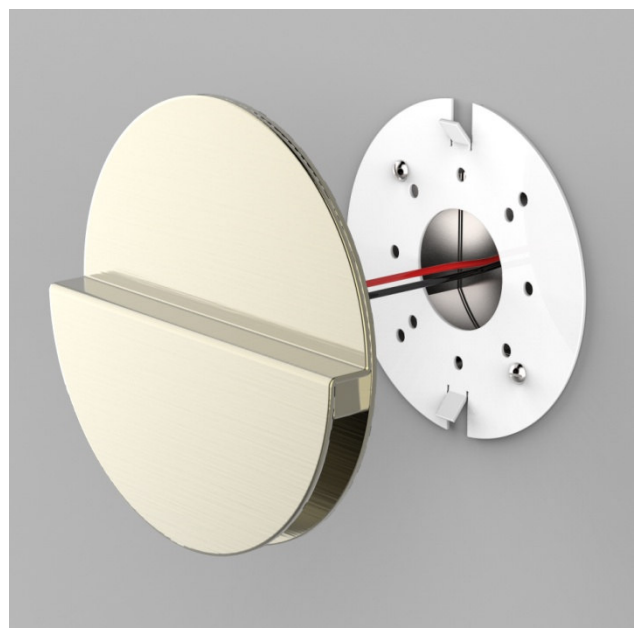


Figure 2

STEP 3

- Install LED driver box within wall, remotely away from fixture. Driver will not fit inside fixture.
- Supply power to input side of remote driver (hot and neutral).
- Driver box must be properly grounded.
- Run red and black LED driver leads to electrical box where sconce will be installed.

STEP 4

- Remove mounting plate from backside of fixture by loosening set screws, (Figure 3)
- Install mounting plate to wall electrical box with the screws provided. (Figure 1)

STEP 5

- While holding fixture, make LED wiring connections with included connectors. (Figure 2)
- Connect RED (+) LED wire to red driver wire as discussed in STEP 3.
- Connect BLACK (-) LED wire to black driver wire as discussed in STEP 3.
- Push all connections inside the outlet box.
- **NEVER CONNECT WIRES DIRECTLY TO LINE VOLTAGE POWER.**

STEP 6

- Position sconce directly over mounting plate on wall . (Figure 2)

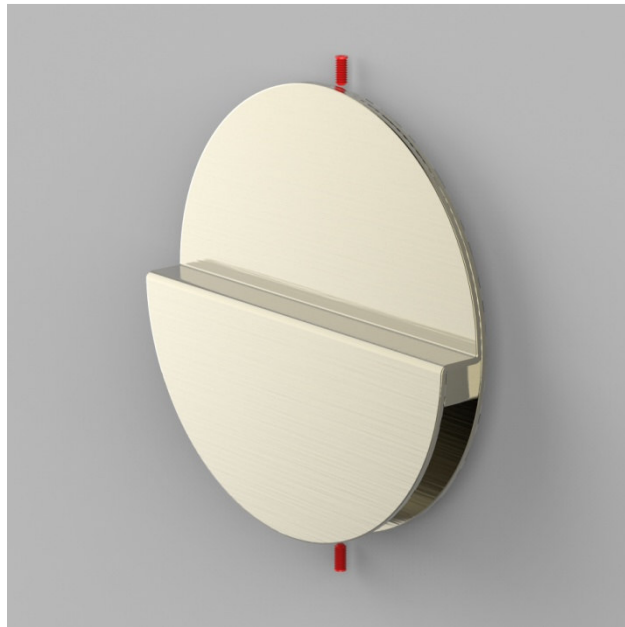


Figure 3

STEP 7

- Using the provided Allen Wrench, tighten set screws at top and bottom of sconce. (Figure 3)
- Set screw shown in red for illustration.



INSTALLATION INSTRUCTIONS

| | |
|---------|---------------------------|
| C-10711 | Plateau Sconce Round 10" |
| C-10712 | Plateau Sconce Round 14" |
| C-10715 | Plateau Sconce Square 10" |
| C-10716 | Plateau Sconce Square 14" |

IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

Due to the semi-recessed driver on the back side of the mounting plate, this fixture must be mounted on a 3½" octagonal electrical box. If this requirement cannot be satisfied, STOP INSTALLATION NOW!

STEP 1

- Carefully remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish.

STEP 2

- Turn off power at fuse box or circuit breaker.

STEP 3

- Remove mounting plate from the backside of fixture by loosening set screws at top and bottom of sconce. (Figure 4)

STEP 4

- Make wire connections using orange twist-on connectors. (Figure 1)
- Connect the white fixture lead to the neutral supply wire (typically white).
- Connect the black fixture lead to the hot supply wire (typically black).
- Connect the copper fixture wire to the ground wire or ground terminal in the outlet box.
- Push all connections inside the outlet box.

STEP 5

- Secure mounting plate directly to outlet box with screw provided (shown in red). (Figure 2)
- Be sure plate sits flat against the wall.

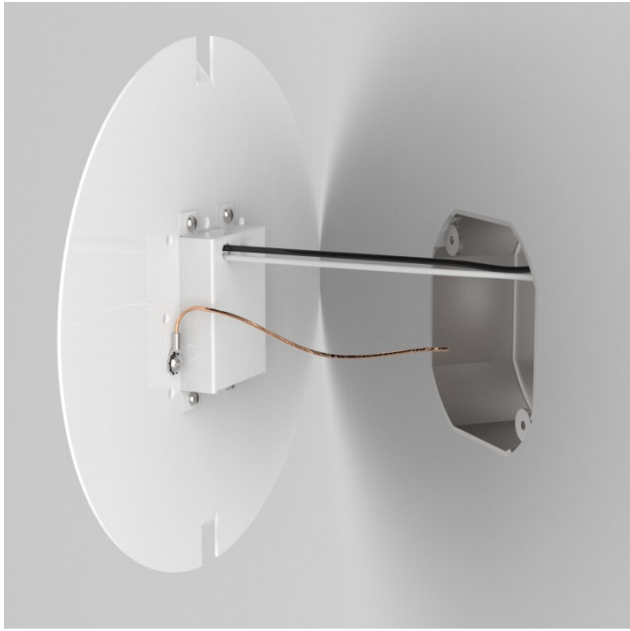


Figure 1



Figure 2

STEP 6

- Using the provided wire connectors, connect RED (+) LED wire to red (+) driver wire.
- Connect BLACK (-) LED wire to black (-) driver wire.

STEP 7

- Position decorative housing directly over mounting plate. (Figure 3)
- Secure into position by tightening top and bottom set screws (shown red) with the provided Allen Wrench (Figure 4)



Figure 3



Figure 4

STEP 8

- Restore power to circuit.