



INSTALLATION INSTRUCTIONS

C-10751 Spire Sconce



IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

STEP 1

- Carefully remove fixture components from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Shade is porcelain. Handle with care.

STEP 2

- Remove mounting bracket from fixture (Figure 1)
- Using a hex key, loosen set screws at top and bottom of backplate. Do not remove entirely.

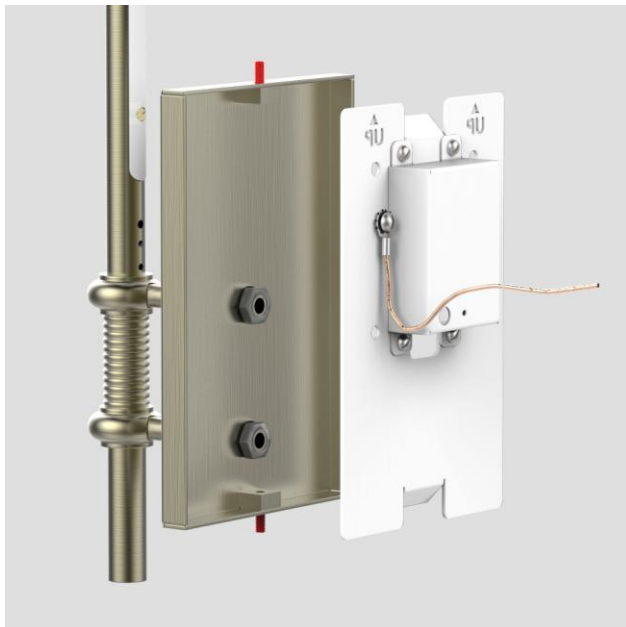


Figure 1



Figure 2

STEP 3

- Make main wire connections using included orange twist-on connectors. (Figure 2)
- Connect the white fixture lead to the neutral supply wire (typically white).
- Connect the black fixture lead to the hot supply wire (typically black).
- Connect the copper fixture wire to the ground wire or ground terminal in the electrical box.

- The standard driver is **non-dimmable**.
- Driver is semi-recessed. Fixture must be mounted onto a 3.50" wide octagonal electrical box.
- Optional dimmable drivers are required to be mounted **remotely**.

STEP 4

- Secure mounting bracket to electrical box with the provided screws (Figure 2)



Figure 3

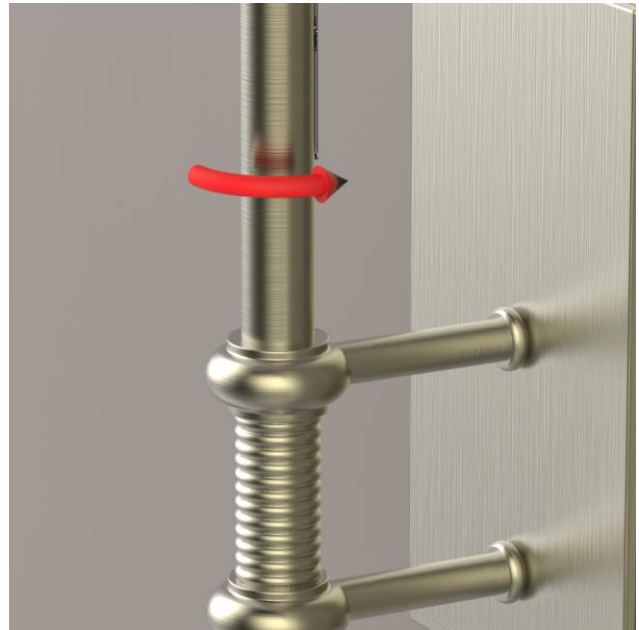


Figure 4

STEP 5

- Using provided twist-on style connectors, connect fixture wiring to the driver (Figure 3)
- Connect the red (+) fixture lead to the red (+) driver wire.
- Connect the black (-) fixture lead to the black (-) driver wire.
- Tuck connections into driver pocket.

STEP 6

- Align fixture over mounting bracket (Figure 3)
- Secure fixture by tightening the top and bottom set screws.
- Give fixture a gentle tug to be sure it is being held firmly in place.

STEP 7

- Gently rotate tapered rod about 1/4 turn counter-clockwise (see arrow) so that screw holes on backside of rod can be seen (Figure 4)

STEP 8

- Carefully place porcelain shade on rod. Upper shade should be "hooked" over the tip of the rod.
- Secure shade to rod with screw and white rubber O-ring (Figure 5). Screw requires a hex key.
- Do not over-tighten as this may crack the porcelain shade.

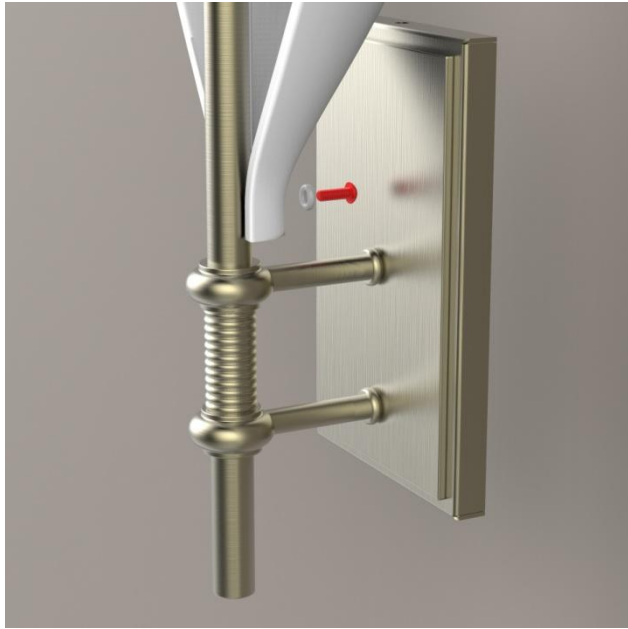


Figure 5

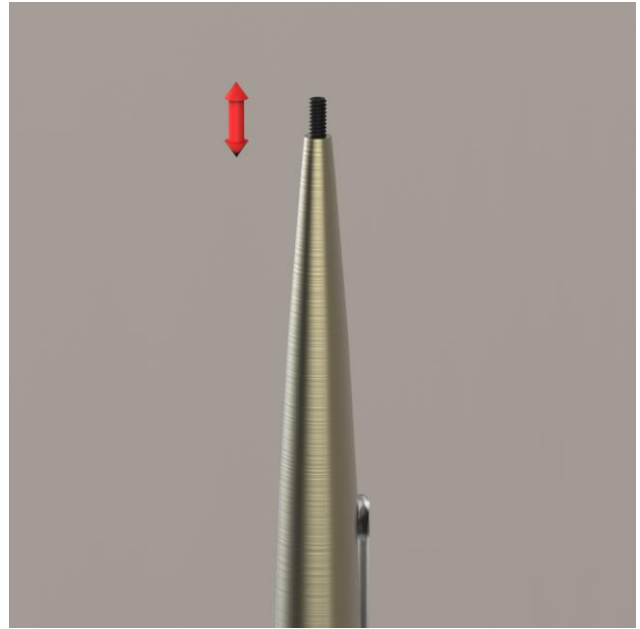


Figure 6

STEP 9

- If screw hole on shade does not properly align with the tapped hole in the tapered rod, remove shade and adjust set screw on tip of rod (Figure 6).
- Secure porcelain shade onto rod (Figures 7/8).

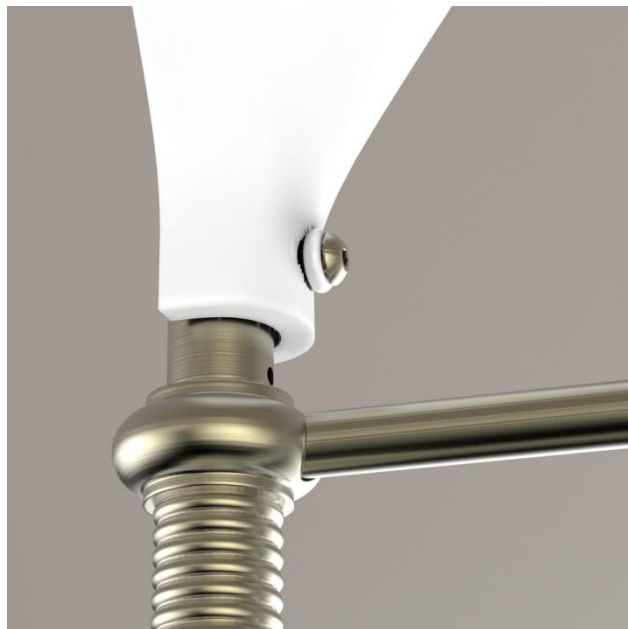


Figure 7

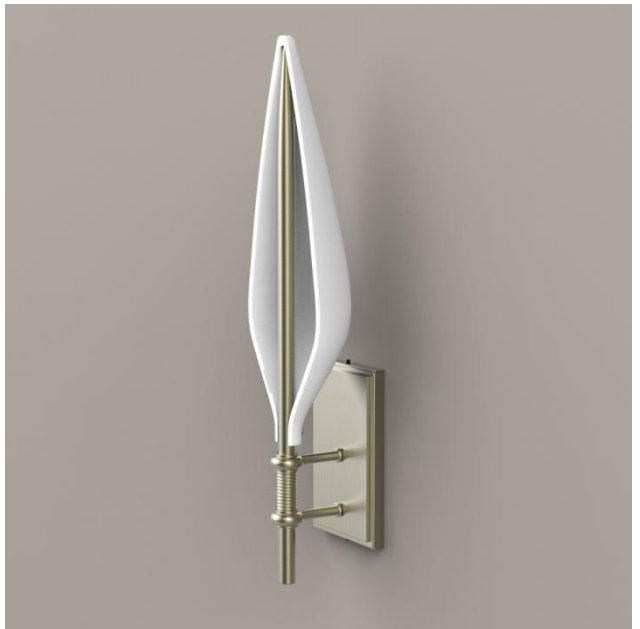


Figure 8

STEP 10

- Rotate rod back into the original position so that back of shade is directly facing the wall.

STEP 11

- Restore power to fixture.