



INSTALLATION INSTRUCTIONS

C-10753 Spire Pendant 3



IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

STEP 1

- Carefully remove fixture components from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Shades are porcelain. Handle with care.

STEP 2

- Separate mounting disk from stem assembly.
- Loosen threaded ring on underside of canopy. Allow canopy to slide down stem (Figure 1).



Figure 1

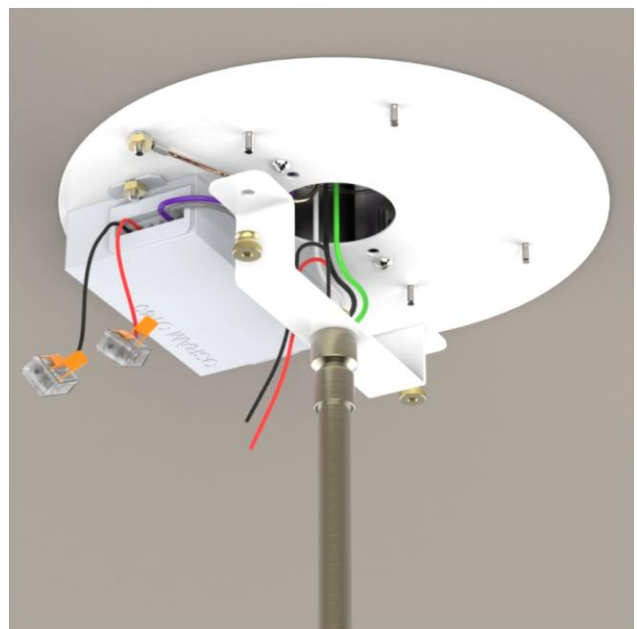


Figure 2

STEP 3

- Remove brass thumb knobs from the stem bracket. (Figure 2)
- Separate stem and bracket from mounting disk.

STEP 4

- Secure mounting disk to electrical box with the provided screws (Figure 3)
- *Note: wiring is not shown for illustration purposes.*

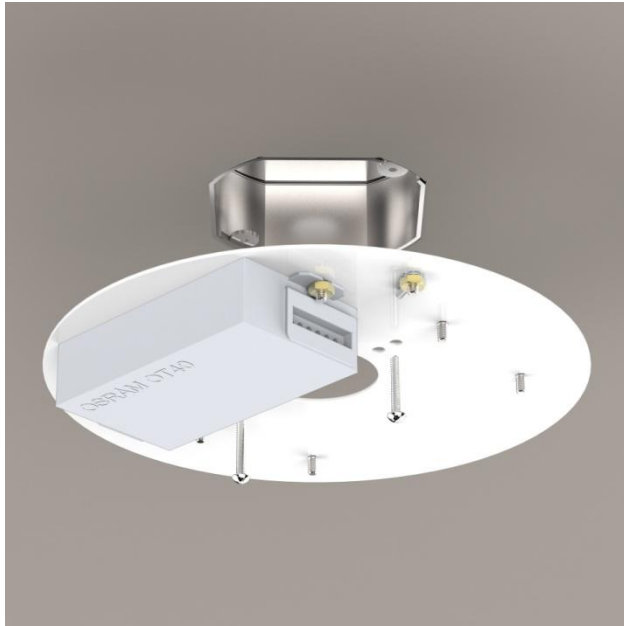


Figure 3

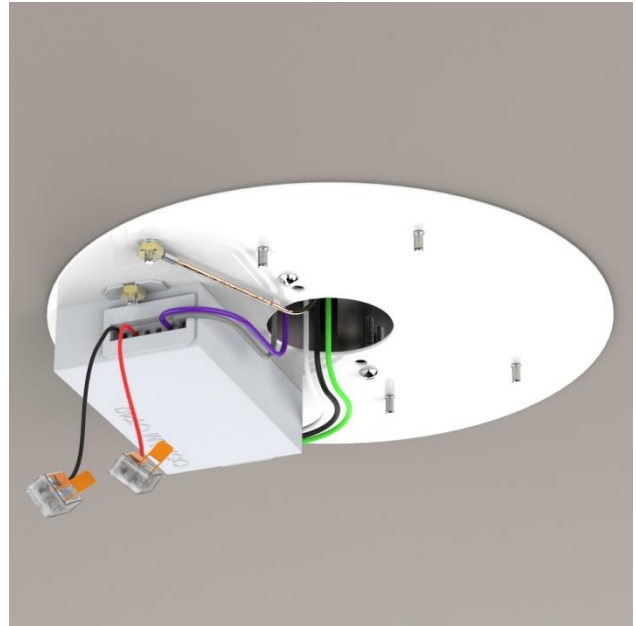


Figure 4

STEP 5

- Make wire connections using included orange twist-on connectors. (Figure 4)
- Connect the white driver lead to the neutral supply wire (typically white).
- Connect the black driver lead to the hot supply wire (typically black).
- Connect the copper fixture wire to the ground wire or ground terminal in the outlet box.
- **If installing on a 0-10V dimming system**, connect the purple driver wire to the purple supply wire.
- Connect the gray driver wire to the gray supply wire.
- If dimming is not required, cap purple and gray wires separately as these wires are not needed.
- Leave black and red wires dangling for hookup on a later step.

STEP 6

- Feed fixture wiring up through stem (Figure 5)
- Thread stem onto hub of fixture.
- **Critical!** Be sure that threaded collar and canopy are placed on the stem, as shown (Figures 5/6)

STEP 7

- Lift fixture up to mounting disk. Align support bracket over studs on disk (Figure 7)
- Secure with thumb knobs.
- Allow fixture to hang freely.



Figure 5



Figure 6

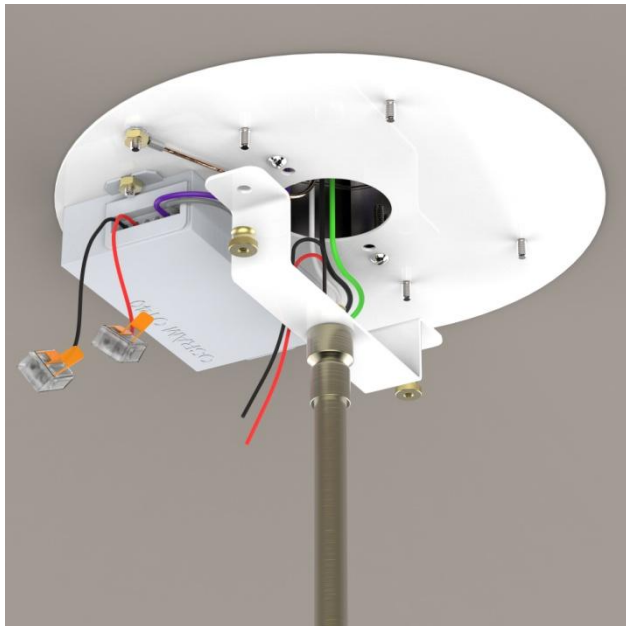


Figure 7



Figure 8

STEP 8

- Using provided lever-style connectors, connect fixture wiring to the driver (Figure 7)
- Pair the red (+) fixture lead to the red (+) driver wire.
- Pair the black (-) fixture lead to the black (-) driver wire.

STEP 9

- Gently slide canopy up stem to avoid scratching.
- Secure canopy onto the swivel aligner using the threaded collar. (Figure 8)

STEP 10

- Carefully place porcelain shades on rods. Upper shade should be “hooked” over the tip of the rod.
- Secure shade to rod with screw and white rubber O-ring (Figures 9/10). Screw requires a hex key.
- Do not over-tighten as this may crack the porcelain shade.



Figure 9

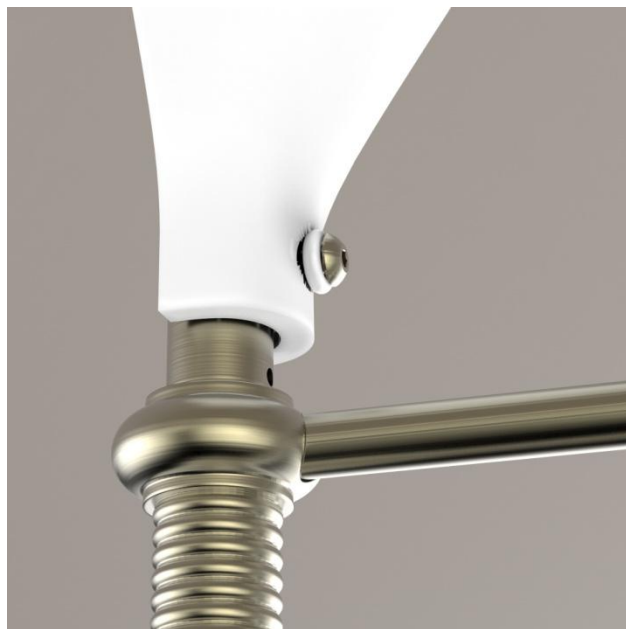


Figure 10

STEP 11

- If screw hole on shade does not properly align with the tapped hole in the tapered rod, remove shade and adjust set screw on tip of rod (Figure 11).
- Secure porcelain shade onto rod



Figure 11

STEP 12

- Restore power to fixture.