




Rev: 12.01.20

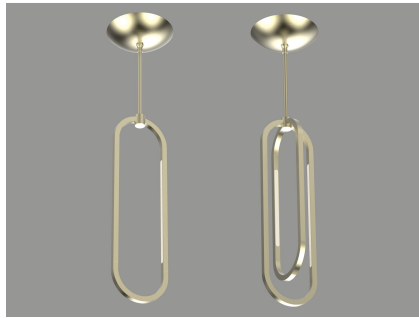

## INSTALLATION INSTRUCTIONS

C-10740	Ovalo Pendant Single 24"
C-10742	Ovalo Pendant Single 36"
C-10741	Ovalo Pendant Double 24"
C-10743	Ovalo Pendant Double 36"

### IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

#### STEP 1

- Carefully remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Place fixture on a padded surface such as a blanket.

#### STEP 2

- If fixture arrives fully pre-assembled, unthread ring under domed canopy (Figures 1 & 2).
- Slide canopy down to bottom of the stem. Unthread brass thumb knobs (shown red – Figure 2) holding support bracket in place and separate fixture from electronics assembly.
- Longer height fixtures will arrive with the main fixture body packed separately. If this is the case, remove threaded ring under canopy, then remove thumb knobs holding support bracket. (Fig 2)



Figure 1

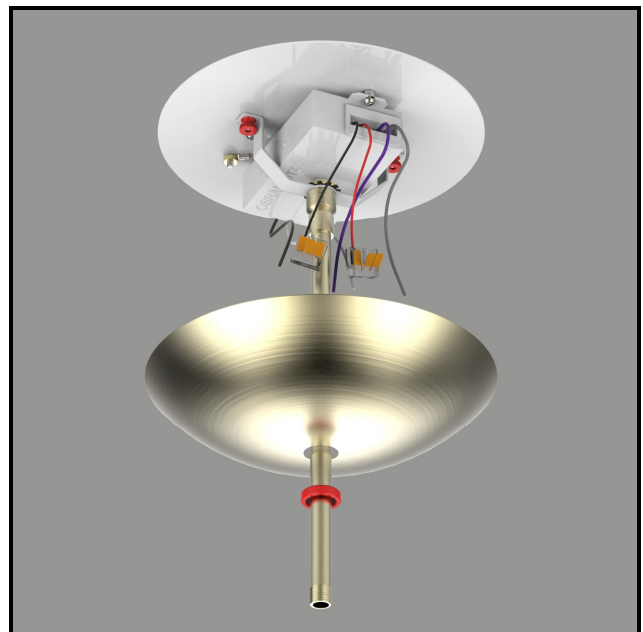


Figure 2

### STEP 3

- With a screwdriver, remove the two screws holding the power driver in place. (Figure 3)
- Remove driver.

### STEP 4

- Secure mounting disk directly to ceiling box with the 1" screws provided. (Figure 4)

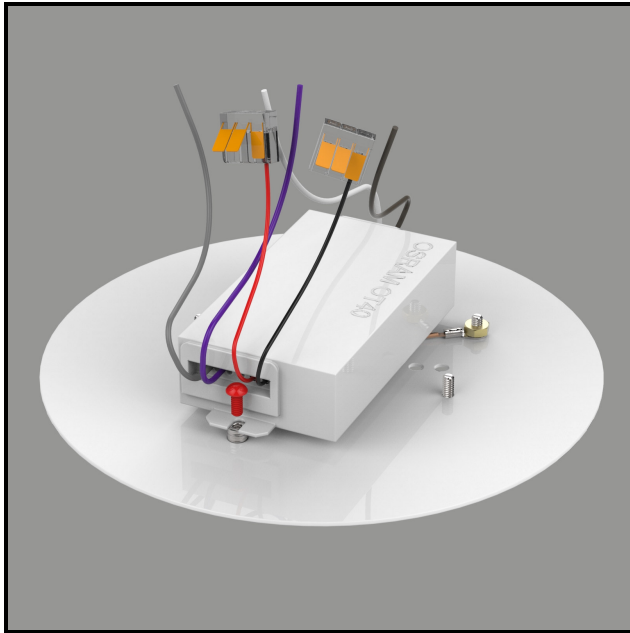


Figure 3

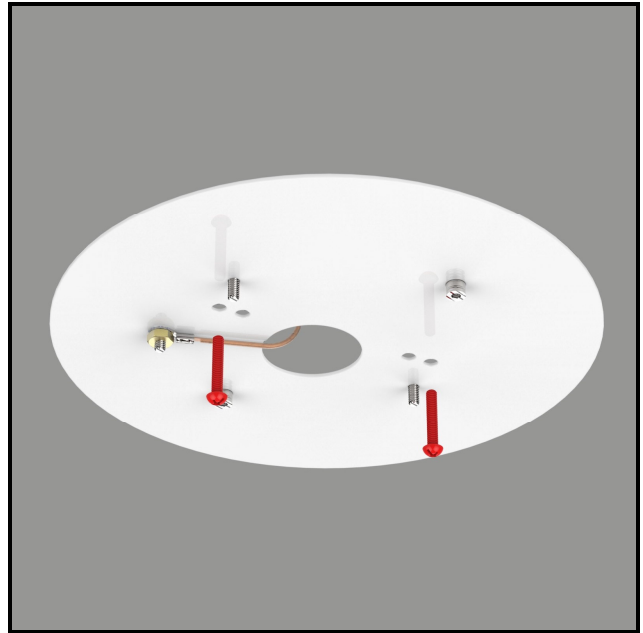


Figure 4

### STEP 5

- Make main wire connections using included orange twist-on connectors. (Figure 5)
- Connect the white driver lead to the neutral supply wire (typically white).
- Connect the black driver lead to the hot supply wire (typically black).
- Connect the copper fixture wire to the ground wire or ground terminal in the outlet box.
- If installing on a 0-10V dimming system, connect the purple driver wire to the purple supply wire.
- Connect the gray driver wire to the gray supply wire.
- If dimming is not required, cap purple and gray wires separately and tuck into the canopy.

### STEP 6

- Carefully feed the wiring connections through the hole in the mounting disk. (Figure 5)
- Reattach driver to mounting disk with the screws removed in STEP 3.
- Wire will be routed under the driver. Be sure wires are not pinched and driver sits evenly raised about 1/4" off the mounting plate.

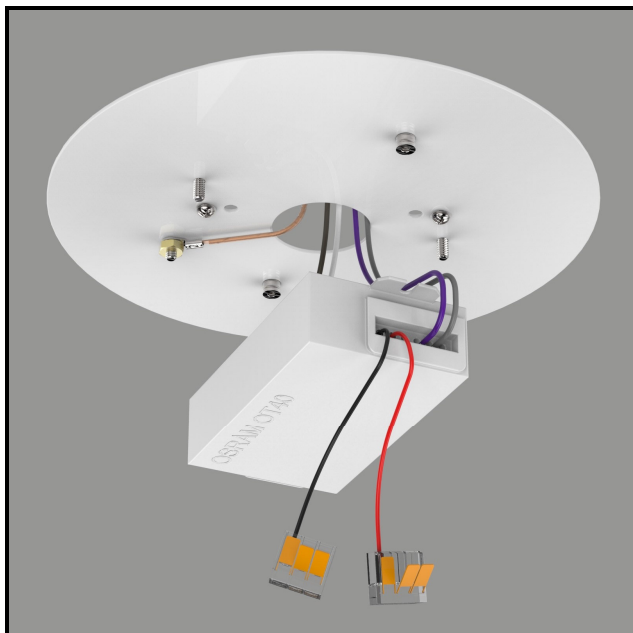


Figure 5

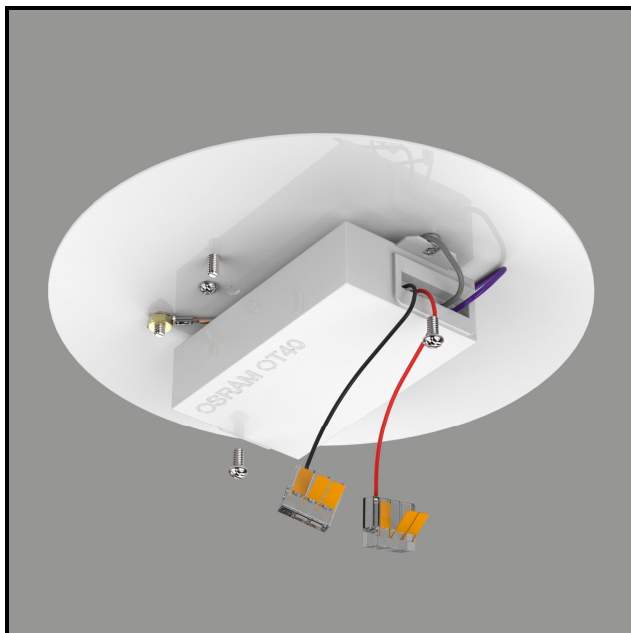


Figure 6

#### STEP 7

- Prepare main body for installation onto ceiling. (Figure 7)

#### STEP 8

- If fixture arrived unassembled, feed red and black fixture wires up through stem.
- Prior to assembling stem onto main body, threaded ring from Figure 2 must be under the canopy, as shown. (Figure 8)

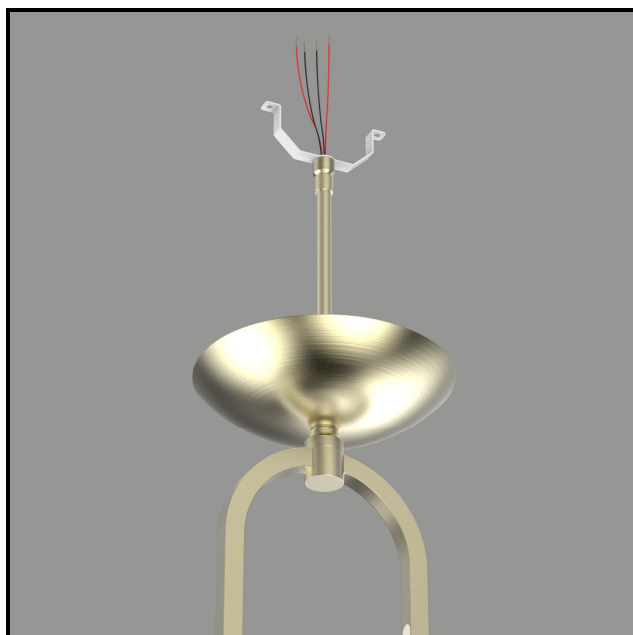


Figure 7

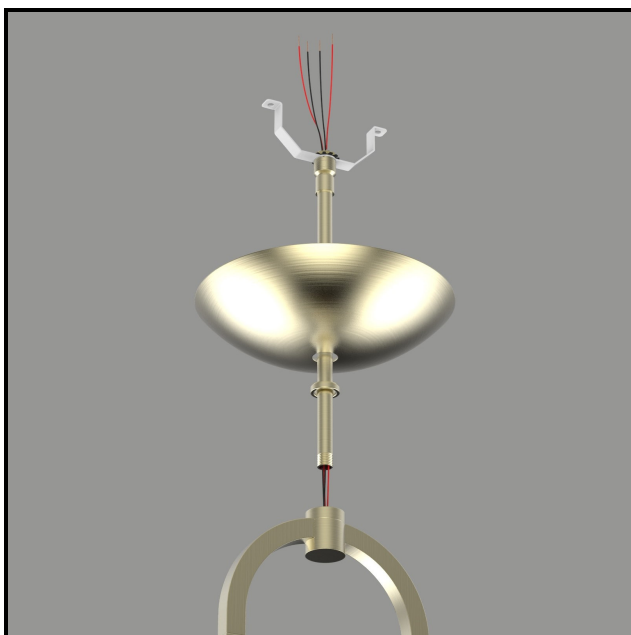


Figure 8

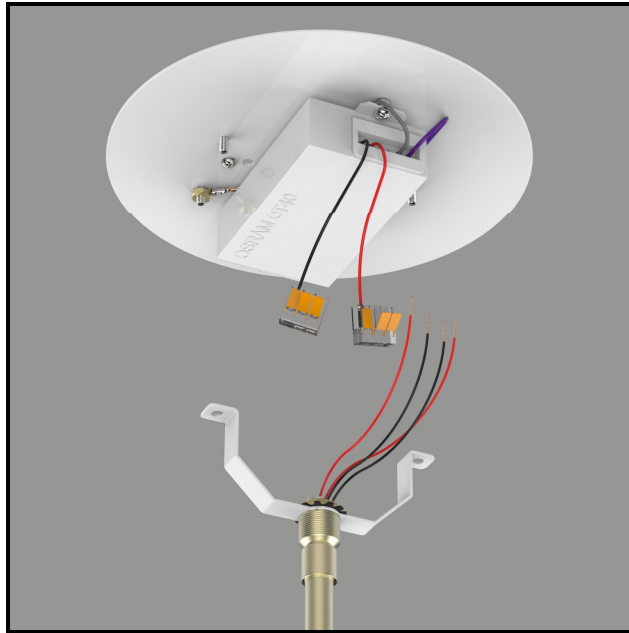


Figure 9

#### STEP 9

- Make wire connections from driver to fixture. (Figure 9)
- Connect all the red wires together using a levered wire connector or an appropriate twist-on style.
- Connect all the black wires together using a levered wire connector or an appropriate twist-on style.
- The number of wires may vary depending on which fixture is being installed.

#### STEP 10

- Align fixture bracket over studs on mounting disk. Secure with thumb knobs. (Figure 10)
- Slide canopy up stem and secure in place with threaded ring. (Figure 11)

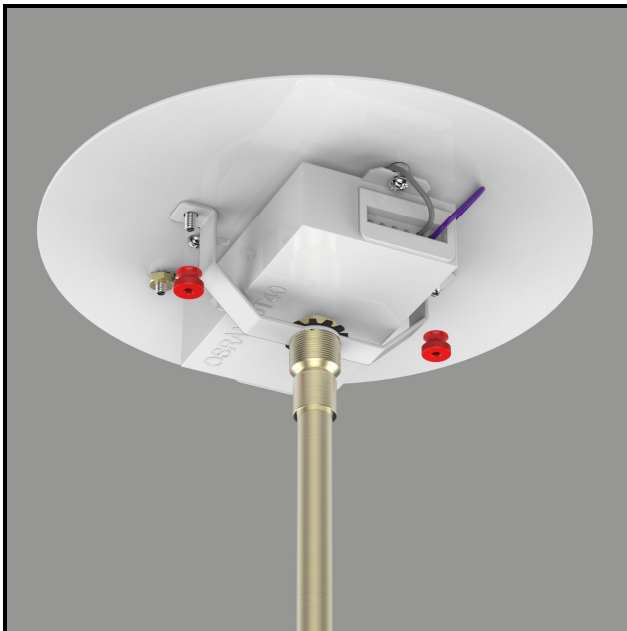


Figure 10

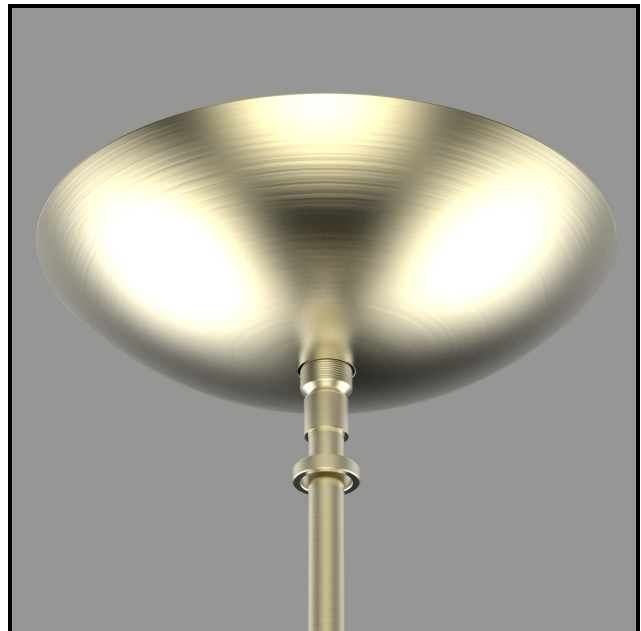


Figure 11

#### STEP 11

- Restore power to circuit. Turn on fixture.