



## INSTALLATION INSTRUCTIONS

C-10933      Arcos Sconce  
E-10933      Arcos Sconce Exterior

### IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

This fixture requires remote installation of the LED driver within the wall or other suitable location. If this requirement cannot be satisfied, STOP INSTALLATION NOW!

#### STEP 1

- Carefully remove fixture from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Glass shade panels are fragile, so handle with care.

#### STEP 2

- Install driver enclosure within wall or ceiling or another convenient location, remotely away from fixture. The driver will not fit inside fixture.
- Make wire connections using included twist-on connectors.
- **If installing on an ELV/reverse-phase or MLV/Triac dimming system, or a basic switch:**
  - Connect the white driver wire to the neutral supply wire (typically white).
  - Connect the black driver wire to the hot supply wire (typically black).
  - Connect the copper ground wire to the ground supply wire or terminal.
  - The fixture may now be dimmed using a compatible ELV/MLV/Triac dimmer.
- **If installing on a 0-10V dimming system**, follow the previous steps plus:
  - Connect the purple driver wire to the purple supply wire
  - Connect the pink (or gray) driver wire to the pink (or gray) supply wire.
- **If 0-10V dimming is not required:**
  - Cap purple and pink (or gray) wires as these wires are not needed.
- Run the low-voltage cable from the driver enclosure to the outlet box location.
- Leave cable dangling from outlet box for hookup on a later step.

#### STEP 3

- Secure tabbed mounting bracket to outlet box with the mounting screws provided. (Fig 1)

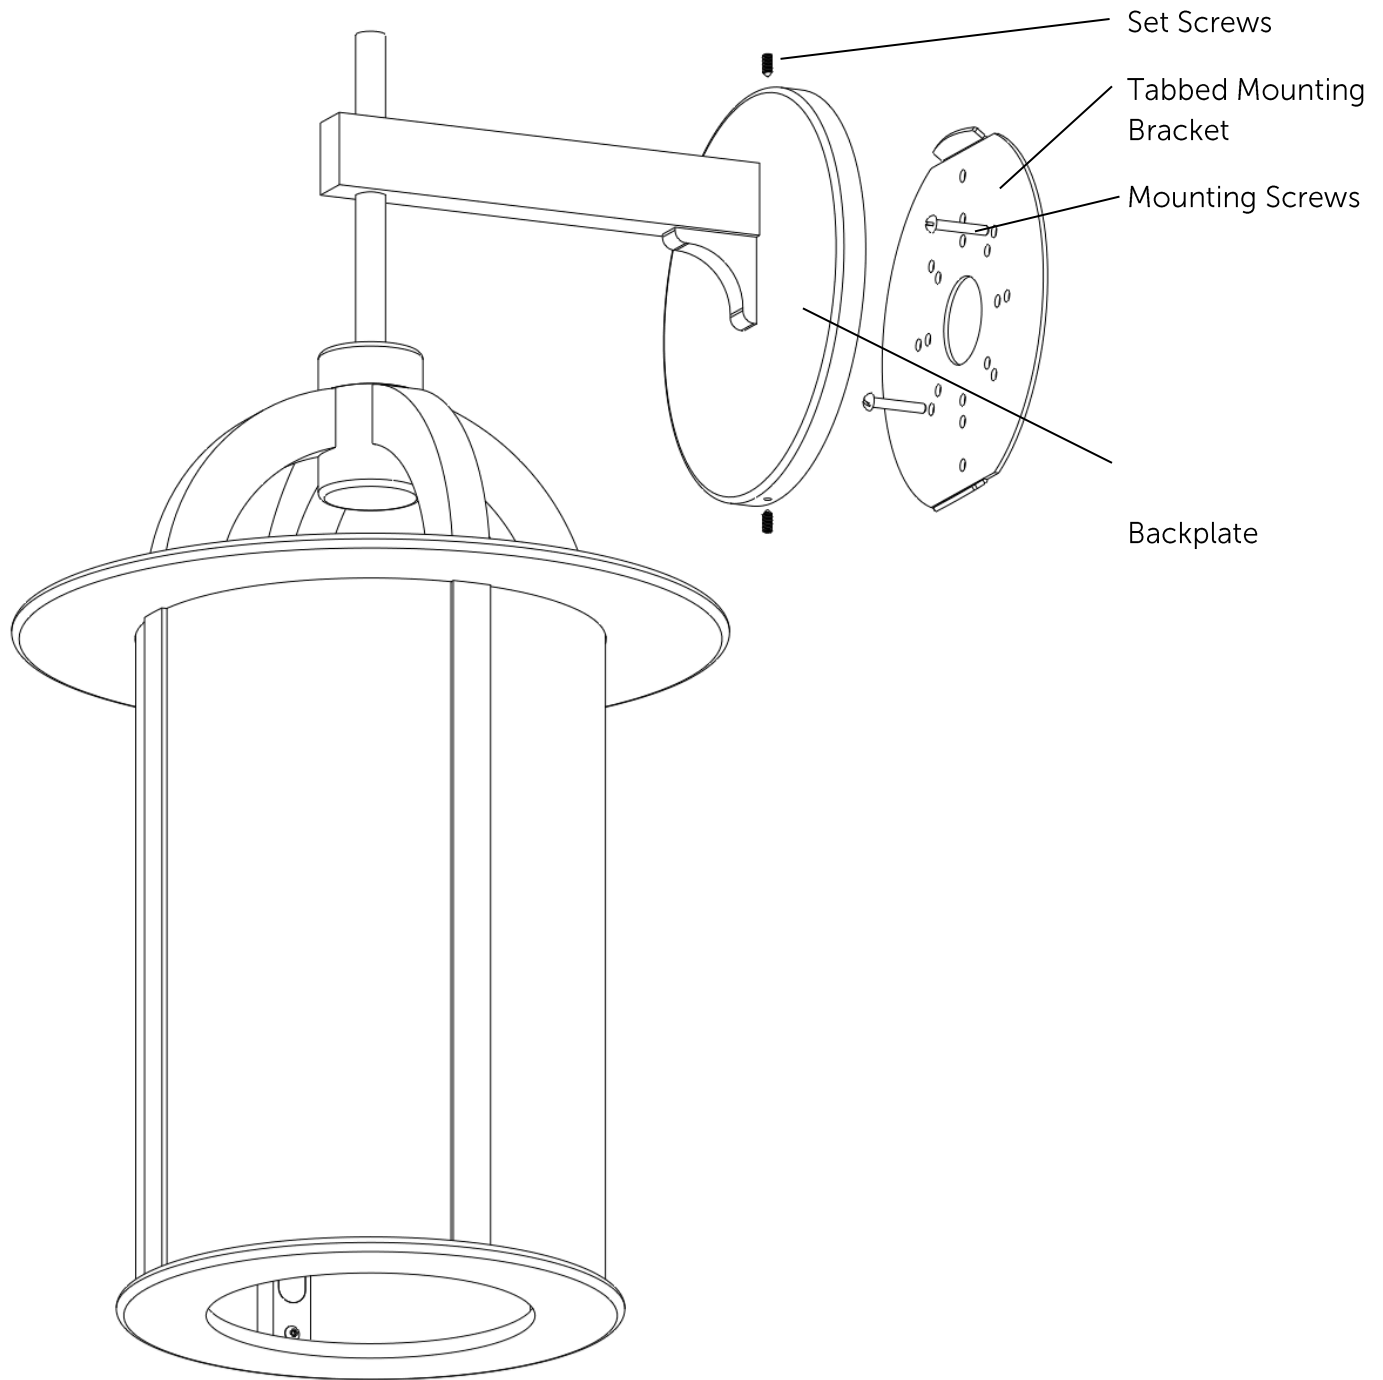


Figure 1

#### STEP 4

- Carefully hold fixture near outlet box location.
- Make remaining wiring connections.
- Connect red (+) fixture wire to red (or labeled) supply cable wire in outlet box.
- Connect black (-) fixture wire to black (or labeled) supply cable wire in outlet box.
- Push connections inside outlet box.

STEP 5

- Align fixture over tabbed mounting bracket.
- Secure by tightening the set screws on the top and bottom of the backplate, using the provided hex key.

STEP 6

- For the **EXTERIOR VERSION ONLY**, apply a bead of clear silicone around the perimeter of the backplate, against the wall.
- Do not apply silicone to a 2" section at the bottom of the backplate. This will allow residual moisture to seep out properly.

STEP 7

- Restore power to the fixture.