



## INSTALLATION INSTRUCTIONS

C-10783 Nebula Pendant 9



### IMPORTANT!

AT ALL TIMES WIRING TO BE DONE PER NATIONAL ELECTRICAL CODES (NEC) OR APPLICABLE LOCAL CODES. READ ALL INSTRUCTIONS THOROUGHLY. TURN OFF POWER AT CIRCUIT BREAKER OR FUSE BOX BEFORE PROCEEDING.

#### STEP 1

- Carefully remove fixture components from packaging. Avoid using a sharp blade on the packaging, as doing so may result in damage to the fixture or finish. Shades are alabaster. Handle with care.

#### STEP 2

- Separate mounting disk from canopy.
- Using a hex key, loosen set screw on side of canopy. Remove mounting disk (Figure 1).



Figure 1



Figure 2

#### STEP 3

- Secure mounting disk to electrical box with the provided screws (Figure 2)
- Due to weight of fixture, use provided toggle anchors or equivalent anchors for the ceiling type.

#### STEP 4

- Lift fixture up toward mounting disk (Figure 3).
- Canopy side hole must align with notched edge of mounting disk, shown with arrows (Figures 3/4)
- Feed the three stainless steel cables into the slotted brackets on the ceiling disk.
- Allow fixture to hang freely.



Figure 3



Figure 4

#### STEP 5

- Make wire connections using included orange twist-on connectors. (Figures 3/5)
- **If installing on ELV/reverse-phase or MLV/forward-phase dimming systems, or a basic switch:**
  - Connect the white driver lead to the neutral supply wire (typically white).
  - Connect the black driver lead to the hot supply wire (typically black).
  - Connect the copper fixture wire to the ground wire or ground terminal in the electrical box.
- **If installing on a 0-10V dimming system,** follow the previous steps plus:
  - Connect the purple driver wire to the purple supply wire.
  - Connect the gray driver wire to the gray supply wire.
- **If 0-10V dimming is not required:**
  - Cap purple and gray wires as these wires are not needed.

#### STEP 6

- Note positioning of three brass balls on ceiling disk (Figure 5)
- Note positioning of three slotted support brackets inside canopy, shown with arrows (Figure 6).
- Raise fixture toward ceiling disk. Align balls with slotted brackets, rotate canopy to lock into place.
- Be sure that support cables are carefully tucked fully into canopy and are not pinched.

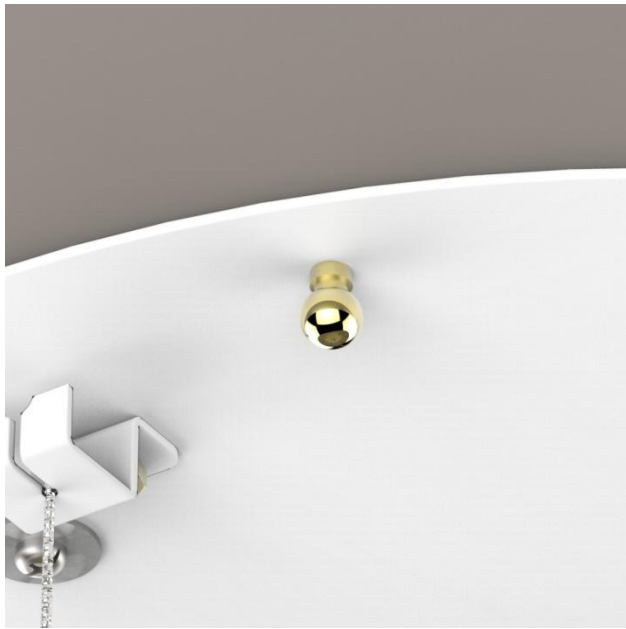


Figure 5

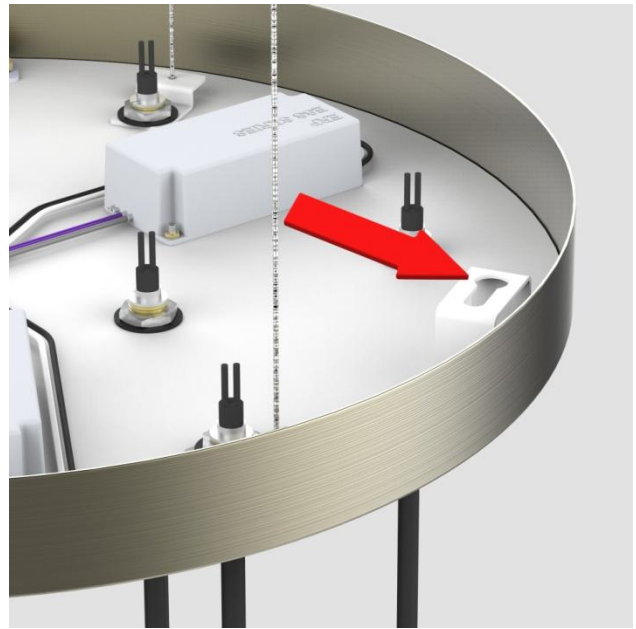


Figure 6

STEP 7

- Lock properly rotated canopy by threading in the side set screw (Figure 7).



Figure 7



Figure 8

STEP 8

- If alabaster shade needs to be removed or installed, slide brass cone up cord (Figure 8).
- Using a hex key, remove or install set screws. Alabaster cone is fragile so it should be properly supported during this step.



Figure 9

STEP 9

- Restore power to fixture.